

**AS SHIPPED INSTRUCTIONS  
(GET STARTED WITHOUT READING THE MANUAL!)**

**WIRELESS TIMER SETUP – Two BEAMS FOR DIFFERENT  
START AND FINISH LINES**

Install a fresh 9V Alkaline (you'll need 5 or 6 of them) batteries in:

1. The handheld Sport-Timer 3000
2. The Two YELLOW Beam Transmitters
3. The Two BLACK Beam Receivers
4. In the Large Display if you have purchased one.

**SETUP:**

- Mount the Transmitters and a Receivers on opposite sides of your START/FINISH line. Use tripods, with an adjustable head on the Black Beam Receiver.
- Turn ON the small switches on the side of the Transmitters and the Receivers. Make sure they are pointed at each other and the Red LED light is glowing solid on the back of the receiver (BLACK box) at the START/FINISH line.  
(**Check the manual for fine alignment a must read**)

**OPERATION:**

- Turn ON the handheld Sport-Timer 3000 by pressing and holding the **START/RESET** button for 3 seconds. You should see all zeroes on the display.
- Pass something through the Start Beam. The TIMER will ZERO instantly and start timing. Pass something through the Finish Beam, the TIMER will stop and display the time. It will always ZERO when it starts, so there is no need to reset each time.

For example, 43.509 seconds is displayed were 43 in the upper right corner of the Sport-Timer 3000 Display is seconds and 509 in the bottom left corner is thousands of a second.

- You have full manual control to STOP and START the Timer at any time by pressing the **START/RESET** button just like any stopwatch.
- If a competitor does not finish, the Timer will keep running -- just STOP the timer manually with the **START/RESET** button, or momentarily pass something through the Beam.
- To turn OFF the Timer manually, it must not be running, so stop it manually if necessary. Press and hold the **MODE** button for 3 seconds and the display will go blank and the timer will turn off.

**COMPLETE INSTRUCTIONS**

**This abbreviated Guide is intended to get you started. More features and capabilities are available and are discussed in the Users Manual. If you press the wrong buttons or get into a display mode that does not look right, just take the battery out and put it back in and you can turn the timer ON like usual.**