



Smarter Pest Control®

MOSQUITO REPELLENT DECOSHIELD® LANTERN

DIRECTIONS FOR USE:

- 1.** Open clear pouch and remove repellent tube and twist-tie.
- 2.** Place DecoShield® upright on a flat surface. Unscrew top cap, exposing inner funnel and cone.
- 3.** Carefully cut open repellent tube and empty oils onto top of cone. Wait 2 minutes for oils to fully drain through funnel. Replace top cap.
- 4.** Using twist-tie, hang outdoors 5-6 feet off the ground. DecoShield® can also sit on a table or other stable surface. If using more than one DecoShield®, place them a maximum of 15 feet apart.
- 5.** For best results, activate and place DecoShield® 30 minutes before people congregate outdoors.
- 6.** Repellency lasts up to 4 days. The natural color of the essential oils will turn the inner cylinder a light yellow/yellow-orange, which grows darker with refills. Refills are available where you purchased DecoShield® or visit rescue.com/where-to-buy to find local retailers.
- 7.** To use light, add two AAA batteries (not included) to bottom fixture. Press on/off switch to operate. Light is purely for decoration. DecoShield® continues to repel insects whether or not the light is on, provided the oils are refreshed regularly.



STORAGE/DISPOSAL:

Store unused repellent tube in original package in cool, dry place. Place in trash after use. Buyer assumes all risks of use not in accordance with product's intended use, instructions and cautions.

rescue.com



[/rescuepestcontrol](https://www.facebook.com/rescuepestcontrol)



[@rescue](https://twitter.com/rescue)